


PLT Mini 100 Projectile Dyneema



Stronger line is installed to withstand more tension.
The line can be re-installed

Article 4101 Projectile PLT® Mini Rescue 100 dyneema 2

Projectile PLT® Mini Rescue 100 is made from ABS plastic and has an aluminum inner tube. Filled with an internal line of 135m 2mm Dyneema. The projectile and line floats in water. Typical launching distance with a dry and clean line: 130m. Breaking strength of the line: 7649N (780kg).

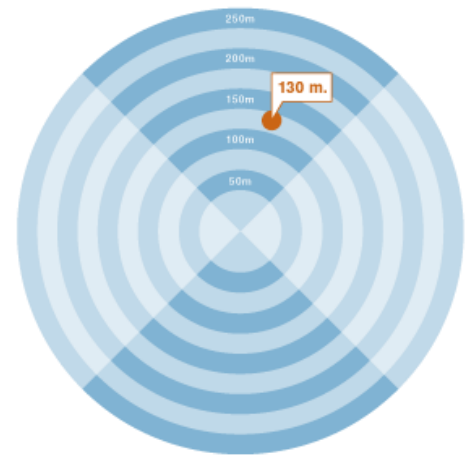

Operations

The PLT Mini is very maneuverable and ideal for situations where one needs to react fast from any point on the vessel.