


75 Upgrade



Medium range Line Transfer
Emergency Towing Arrangements
Rescue operations

Article 6303	Launching Tube PL T 75	1
Article 6101	Projectile Ball	2
Typical shooting range with a dry and clean line with 5mm (art no. 6109): 90m		
Article 6201	Line box 5mm floating line	1
Line box containing line art no 6109, polypropylene (120m). Breaking strength 440kg. Floats and has a very bright yellow color. Breaking strength: 440kg.		

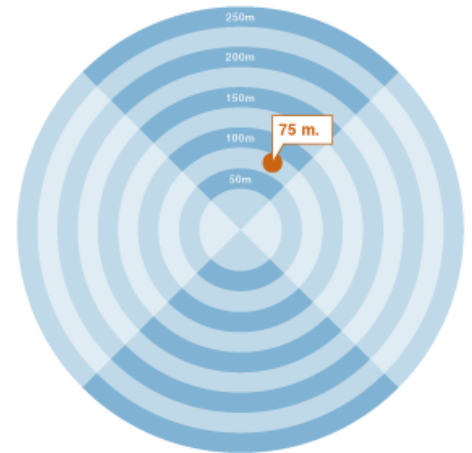

Operations

Launches an orange rubber ball that pulls a 5mm bright yellow floating line up to 90 meters. The ball can land on deck and it is filled with a liquid in order to avoid bouncing and freezing.

The PLT 75 increases your safety zone for your equipment and personnel. It is commonly used in towing, vessel to vessel and general line transfer operations.